



## **HIGH PRESSURE PLUG REMOVAL PROCEDURE**

1. Insert Allen wrench in body end or wrench on body flats and turn nut counter clockwise.
2. Loosen the nut until the nut is covering the end portion of the body.
3. Tap forward with a hammer to loosen the jaws (do not tap too hard so as not to damage the threads and body).
4. Remove the plug (may require working in and out by hand to fully remove).